




SCREW-FIX TYPE ROOFING

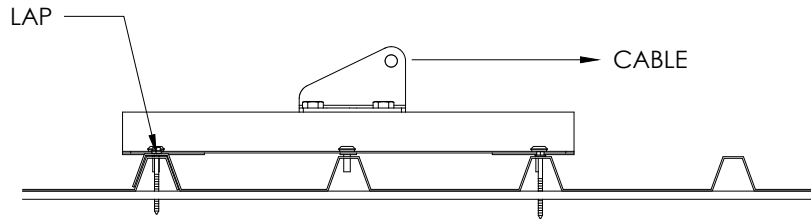


IN THIS CASE THE PLATE IS FIXED ON THE LAP SO NO ADDITIONAL RIVETS ARE REQUIRED.

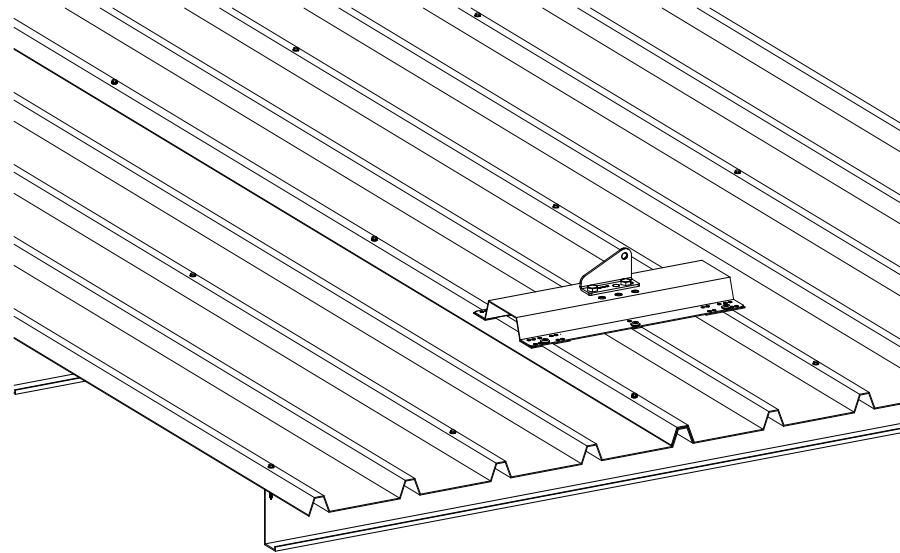

MIN 3 PURLINS REQUIRED

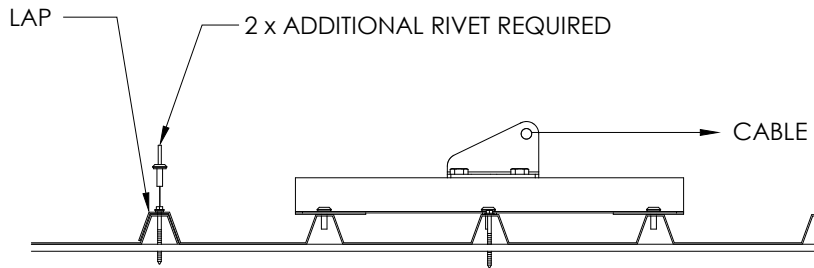

IF THE ANCHOR PLATE IS NOT RIVETED OVER A LAP OR THE LAP IS DIRECTLY BEHIND THE ANCHOR, AN ADDITIONAL 2 RIVETS MUST BE FIXED THROUGH THE LAP.

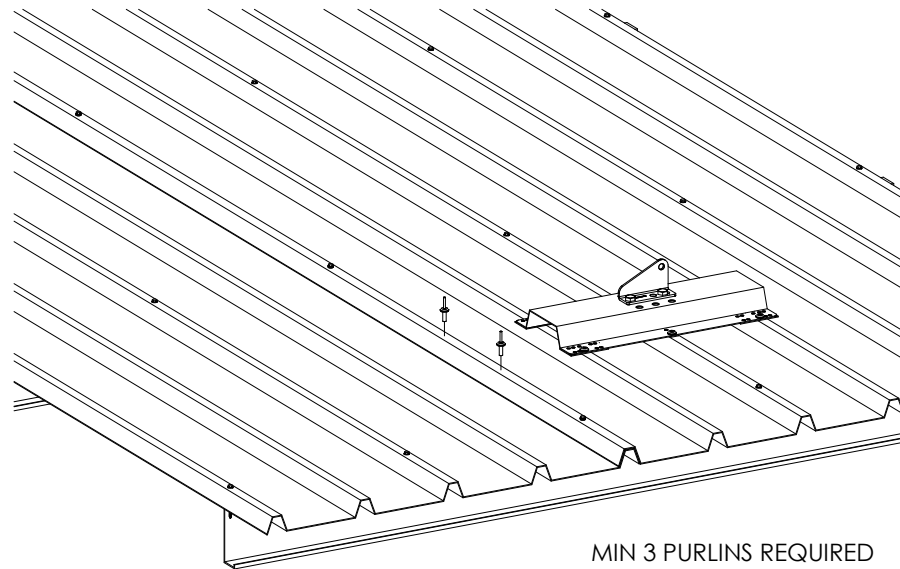

MIN 3 PURLINS REQUIRED